'Click' to download complete Manual

Gestetner LANIER RICOH SAVIN

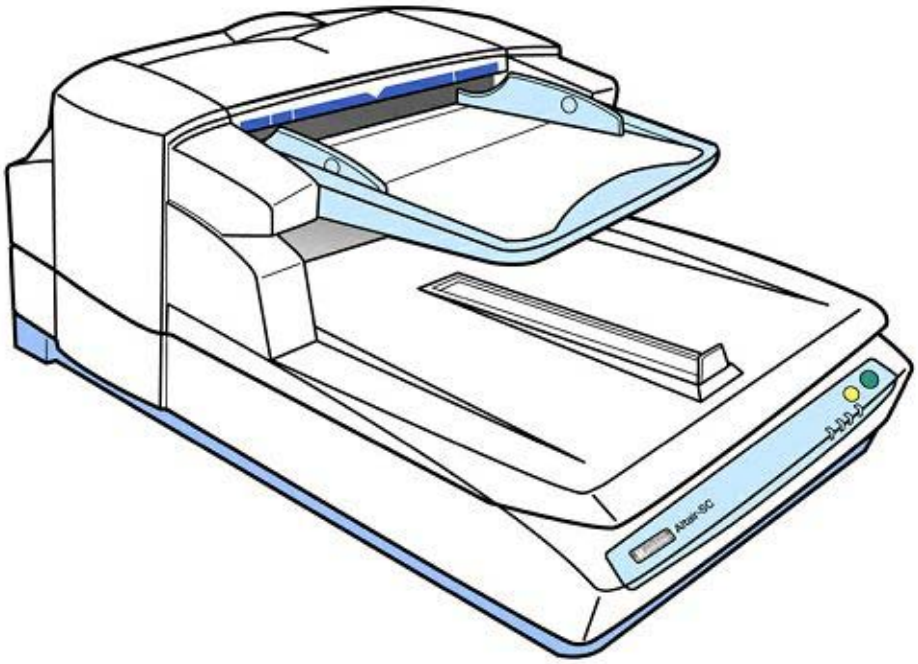

G417/G418

SERVICE MANUAL

002159MIU

RICOH GROUP COMPANIES

service-repairmanual.com

service-repairmanual.com

Gestetner®
LANIER
RICOH®
savin®

G417/G418
SERVICE MANUAL

RICOH GROUP COMPANIES

service-repairmanual.com

Gestetner LANIER RICOH savin

service-repairmanual.com

G417/G418
SERVICE MANUAL

002159MIU

service-repairmanual.com

service-repairmanual.com

It is the reader's responsibility when discussing the information contained within this document to maintain a level of confidentiality that is in the best interest of Ricoh Corporation and its member companies.

NO PART OF THIS DOCUMENT MAY BE REPRODUCED IN ANY FASHION AND DISTRIBUTED WITHOUT THE PRIOR PERMISSION OF RICOH CORPORATION.

All product names, domain names or product illustrations, including desktop images, used in this document are trademarks, registered trademarks or the property of their respective companies.
They are used throughout this book in an informational or editorial fashion only and for the benefit of such companies. No such use, or the use of any trade name, or web site is intended to convey endorsement or other affiliation with Ricoh products.

© 2005 RICOH Corporation. All rights reserved.

service-repairmanual.com

WARNING

The Service Manual contains information regarding service techniques, procedures, processes and spare parts of office equipment distributed by Ricoh Corporation. Users of this manual should be either service trained or certified by successfully completing a Ricoh Technical Training Program.

Untrained and uncertified users utilizing information contained in this service manual to repair or modify Ricoh equipment risk personal injury, damage to property or loss of warranty protection.

Ricoh Corporation

service-repairmanual.com

service-repairmanual.com

LEGEND

PRODUCT CODE	COMPANY			
	GESTETNER	LANIER	RICOH	SAVIN
G417	IS760			
G418	IS760D			

service-repairmanual.com

DOCUMENTATION HISTORY

REV. NO.	DATE	COMMENTS
*	03/2005	Original Printing

service-repairmanual.com

G417/G418
TABLE OF CONTENTS

INSTALLATION

1. INSTALLATION PROCEDURE 1-1
1.1 INSTALLATION REQUIRMENTS 1-1
1.1.1 ENVIRONMENT 1-1
1.1.2 MACHINE LEVEL 1-1
1.1.3 MINIMUM SPACE REQUIRMENTS 1-1
1.1.4 POWER REQUIRMENTS 1-1
1.2 MAINFRAME AND OPTION INSTALLATION PROCEDURES 1-2
1.2.1 ACCESSORY CHECK 1-2
Mainframe 1-2
IEEE1394 I/F Kit (OPTION) 1-3
IPU (OPTION) 1-3

PREVENTIVE MAINTENANCE

2. PREVENTIVE MAINTENANCE SCHEDULE 2-1
2.1 USER MAINTENANCE 2-1
2nd side white plate cleaning 2-2

REPLACEMENT AND ADJUSTMENT

3. REPLACEMENT AND ADJUSTMENT 3-1
3.1 SPECIAL TOOLS 3-1
3.2 REPLACEMENT 3-2
3.2.1 ADF EXTERIOR 3-2
3.2.2 PLATEN COVER 3-2
3.2.3 SCANNER EXTERIOR 3-3
3.2.4 SCU 3-4
3.2.5 TRAY HOME POSITION SENSOR 3-5
3.2.6 ORIGINAL SET AND WIDTH SENSORS 3-5
3.2.7 LEADING/TRAILING EDGE SENSORS AND DOUBLE-FEED SENSOR 3-6
3.2.8 2ND SIDE REGISTRATION SENSOR 3-7
3.2.9 TRAY LIFT MOTOR AND FEED MOTOR 3-7
3.2.10 TRANSPORT MOTOR AND CLUTCH 3-8
3.2.11 DF BOARD 3-8
3.2.12 PICK UP ROLLER 3-9
3.2.13 2ND SIDE EXPOSURE LAMP 3-10
3.2.14 2ND SIDE SCANNER OPTICS UNIT 3-11
3.2.15 1ST SIDE SCANNER OPTICS UNIT AND EXPOSURE LAMP 3-12
Installing the 1st side scanner optics unit 3-13

service-repairmanual.com

3.2.16 VIOB (VIDEO INPUT/ OUTPUT BOARD) 3-14
3.2.17 SWITCH BOARD.....3-15
3.2.18 SCANNER MOTOR.....3-15
3.2.19 PSU (POWER SUPPLY UNIT) AND PSU FAN.....3-16

TROUBLESHOOTING

4. TROUBLESHOOTING 4-1
4.1 LED FUNCTION MODE 4-1
4.1.1 NORMAL LED FUNCTION TABLE.....4-1
Order of priority.....4-2
4.1.2 SELF DIAGNOSTIC MODE.....4-2
LED function table.....4-2
Descriptions 4-3
4.1.3 BLOWN FUSE CONDITIONS.....4-5
4.1.4 IEEE1394 BOARD (OPTION).....4-5

SERVICE TABLES

5. SERVICE TABLES..... 5-1
5.1 DIP SWITCH FUNCTION.....5-1
5.1.1 DIP SWITCH COMBINATIONS.....5-1
DIP switch setting table (Normal mode).....5-2
DIP switch setting table (service level test mode).....5-2
5.1.2 NORMAL MODE.....5-3
5.1.3 DEMONSTRATION MODE.....5-3
5.1.4 COMPONENT CHECK MODE 5-4
5.1.5 SENSOR TEST MODE 1.....5-4
5.1.6 SENSOR TEST MODE 2.....5-5
5.1.7 SELF-DIAGNOSIS MODE.....5-5
5.1.8 WHITE BALANCE ADJUSTMENT MODE.....5-5
5.1.9 AGING MODE 5-5
5.1.10 ADF COUNTER, BOOK MODE COUNTER AND EXPOSURE LAMP ON-TIME.....5-6
SCSI ID rotary switch.....5-6
LED values 5-6
5.1.11 EEPROM CLEAR MODE.....5-7
5.1.12 FIRMWARE UPDATE PROCEDURE.....5-8
5.1.13 FLASH-ROM MONITOR DOWNLOAD MODE.....5-9

service-repairmanual.com

DETAILED DESCRIPTIONS

6. DETAILED FUNCTION DESCRIPTIONS..... 6-1
6.1 SCANNER OVERVIEW.....6-1
6.2 CONTROL SYSTEM BLOCK DIAGRAM.....6-2
6.3 SCANNING.....6-3
6.3.1 OVERVIEW 6-3

6.3.2 SCANNER DRIVE MECHANISM 6-4
6.3.3 SCANNER OPTICS UNIT 6-5
6.4 ADF OVERVIEW 6-6
6.4.1 MECHANICAL COMPONENT LAYOUT 6-6
Mechanical component layout 6-6
Drive layout 6-7
6.4.2 ORIGINAL SIZE DETECTION 6-8
Original size detection Table 6-9
6.4.3 TRAY LIFT 6-10
6.4.4 PICK-UP AND SEPARATION 6-11
6.4.5 ORIGINAL TRANSPORT AND EXIT 6-12
Simple and duplex scanning 6-13
Scanning mode 6-13
Misfeed and double feed detection 6-14
6.4.6 TIMING CHARTS 6-15
Normal mode (Double-sided) 6-15
Pre-scanning mode (Double-sided) 6-16
Jam and misfeed conditions 6-17
Jam 6-17
Misfeed 6-17
6.4.7 IMAGE PROCESSING 6-18
Scanner optics unit and VBU/ VIOB 6-19
RIPU on SCU 6-19
OIPUB 6-21

service-manual.com

SPECIFICATIONS

1. OVERALL MACHINE INFORMATION 7-1
1.1 MAIN BODY 7-1
1.2 IEEE1394 (OPTION) 7-2
1.3 OPTIONAL IMAGE PROCESSING UNIT (OPTION) 7-2

SERVICE TOOL

SEE SERVICE TOOL SECTION FOR DETAILED TABLE OF CONTENTS

NETWORK SCANNER UNIT TYPE A G829

SEE SECTION G829 FOR DETAILED TABLE OF CONTENTS

ENDORSER UNIT TYPE B G827

SEE SECTION G829 FOR DETAILED TABLE OF CONTENTS